



SC8E

SCARIFIER

Parts/Operations Manual



Stripe Removal Technologies
1.877.205.6053

www.striperemovaltechnologies.com

Revision Date: May 2006



Stripe Removal Technologies
(SRT)

1-877-205-6053

www.striperemovaltechnologies.com

E-mail: sales@striperemovaltechnologies.com

Thank you and congratulations on your decision to purchase Stripe Removal Technologies Surface Preparation Equipment! We are confident that you will be satisfied with your purchase and that you will receive many years of quality use and production.

Our goal is nothing short of excellence in providing the finest surface preparation equipment and service that can be found on the market today. This pursuit of excellence is founded upon our 20 years in selling and servicing surface preparation equipment. The staffs at SRT are dedicated to providing exceptional service and are the cornerstone by which the SRT superior product line is built.

When you need timely service, support or replacement parts, SRT is there with regional warehouses, same day shipping of parts and machines or delivery right to your jobsite. Sales and service staff are available from 5:00 AM to 5:00 PM (PST) for jobsite consulting, trouble shooting or for shipping orders.

On behalf of the entire Stripe Removal Technologies Team, thank you for your valued business and we look forward to servicing your surface preparation needs.

Sincerely,
Stripe Removal Technologies

A handwritten signature in black ink, appearing to read "J. Weder". The signature is fluid and cursive, with a large initial "J" and "W".

Jim Weder
President

Stripe Removal Technologies Equipment Safety Policy Statement

Stripe Removal Technologies (SRT) is adamant that safety is the highest priority for both our employees and customers. When considering set-up and operation of any piece of equipment supplied, manufactured, distributed, rented or serviced by Stripe Removal Technologies, the safety and protection of people should always be the top priority.

All customers and employees should follow all of OSHA and local safety standards, requirements and regulations.

The use of the following safety equipments are both recommended and required when operating any piece of equipment supplied, manufactured, distributed, rented or serviced by Stripe Removal Technologies.

- OSHA approved/certified eye protection (safety glasses).
- OSHA approved/certified hearing and ear protection.
- OSHA approved/certified foot protection (steel toed boots).
- OSHA approved/certified respirator or breathing device.
- OSHA approved head protection (hard hat).
- Proper protective work gloves.
- Proper protective clothing limiting skin exposure.

(The list is not meant to be all inclusive, please exercise sound judgments during operation)

The work area must always have proper ventilation to minimize the health and safety risks of propane and gasoline emissions and airborne dust.

All SRT Equipments are engineered, designed and provided with dust control shrouds and vacuum ports. It is strongly recommended that an approved dust containment system be connected to and used in conjunction with all SRT equipment during operational use. SRT supplies, distributes, rents and services dust control systems with HEPA filtration.

Extreme caution must be exercised at all times when electrical power is considered. All SRT employees are prohibited from working on or hard wiring our equipments to any power source that has not been provided by SRT. Any such work must be performed by a certified electrical technician. No SRT employee is permitted or authorized to work on, operate or connect to our equipment or equipment belonging to our customers to an electrical source that is not within OSHA approved specifications. There are no exceptions to this policy! SRT also strongly recommends that only certified electricians be permitted to deal with or manipulate electrical power sources within our customers' facilities or on their job-sites.

Finally, we at Stripe Removal Technologies cannot stress enough the importance of following general safety practices, the utilization of appropriate safety equipment and the application of common sense when operating equipment supplied, manufactured, distributed, rented or serviced by SRT both on the job-site and in the field.

(MLT 8/15/06)

Table of Contents

| | |
|---|----|
| <u>Important Information</u> | 8 |
| <u>Safety Communication</u> | 9 |
| General Instructions..... | 9 |
| (PPE) Personal Protection Equipment..... | 9 |
| General Operation..... | 10 |
| Before Starting the Machine..... | 11 |
| Electrical Powered Equipment..... | 11 |
| Poisonous Exhaust..... | 12 |
| Dust Warning..... | 14 |
| Dry Grinding..... | 14 |
| <u>Maintenance</u> | 13 |
| <i>Engine Air Filter</i> | 13 |
| <u>Operating Procedures for SC8E (GAS)</u> | 14 |
| Start-Up..... | 14 |
| Drive Motor/Engine:..... | 14 |
| Cutter/Drum Configuration..... | 14 |
| Working with the Scarifier:..... | 14 |
| Changing the cutter drum:..... | 15 |
| Dust Control:..... | 15 |
| <u>Cutter and Flail Shaft Recommendations</u> | 18 |
| <u>Parts for Honda Engine – Gas</u> | 21 |
| <u>Parts for Belt Guard</u> | 23 |
| <u>Parts for Handle Bar</u> | 25 |
| <u>Parts for Housing; Front Wheel; Dust Shield</u> | 27 |
| <u>Parts for Housing End Plate</u> | 29 |
| <u>Parts for Hex Drive Shaft</u> | 31 |
| <u>Parts for Drum</u> | 33 |
| <u>Parts for Depth Adjustment Lever</u> | 35 |
| <u>Parts for Depth Adjustment Rod</u> | 37 |
| <u>Parts for Rear Axle Bracket</u> | 39 |
| <u>Cutter Diagrams</u> | 41 |

Important Information



DO NOT OPERATE THIS EQUIPMENT WITHIN AN ENCLOSED AREA. The exhaust from the internal combustion engine contains carbon monoxide, an odorless and deadly poison. If using equipment indoors, proper and adequate ventilation is required. An approved OSHA air-monitoring system must be in place at all times. **Avoid inhalation of exhaust gas.**

Carbon monoxide gas is toxic. Breathing it can cause unconsciousness and may KILL you. Avoid any areas or actions that expose you to carbon monoxide.

Do to the use of the equipment; suitable protective clothing must be worn or bodily harm may occur. The machine operator must wear eye protection, gloves, earplugs and non-slip safety shoes.

When doing work that causes dust, wear an appropriate respiratory mask that will protect you from the type of dust you are working in.

Before operation please read about this topic and other important safety information that is contained within the enclosed *Engine Owners Manual*.

**READ AND UNDERSTAND BEFORE
ATTEMPTING TO OPERATE THIS EQUIPMENT**

Safety Communication

Safety Instructions are preceded by a graphic alert symbol of DANGER, WARNING, or CAUTION



Imminent hazard which, if not avoided, will result in death or serious injury.



Imminent hazard which, if not avoided, can result in death or serious injury.



Hazards which, if not avoided, could result in serious injury and or damage to the equipment.

General Instructions

Maintain the machine in safe operating condition with all guards in place and secure all mechanical fasteners tight

Ensure all controls in working order and the machine is configured for the job application.

Be sure all safety decals can be clearly read and understood. Replace damaged or missing decals immediately.

Equipment should only be operated by trained personnel in good physical condition and mental health.

Never operate this machine while under the influence of drugs, alcohol or when taking medications that impair the senses or reactions, or when excessively tired or under stress.

Avoid deck inserts, pipes, columns, openings, electrical outlets, or any objects protruding from slab surface.

Maintain a safe operating distance to other personnel. It is the **operators' responsibility** to keep other people (workers, pedestrians, bystanders, etc.) at a safe distance during operation.

Block off the work area in all directions. Failure to do so may result in others being injured by flying debris or exposing them to harmful dust and noise.

For the operator's safety and the safety of others, always keep all guards in place during operation.

Never let equipment run unattended.

(PPE) Personal Protection Equipment



Proper safety attire must be worn when operating this machinery.



The operator must wear approved safety equipment appropriate for the job such as hard hat and safety shoes when conditions require.



Ear protection must be worn at all times when this machine is in use. During normal use, sound levels exceed 92dB.



Eye protection must be worn at all times when this machine is in use. Use only ANSI approved safety glasses to help prevent eye injury.



Operator must wear appropriate clothing and footwear. Steel toe safety shoes should be worn.

Do not wear loose clothing or jewelry that can get tangled or caught in moving parts. Keep body parts and loose clothing away from moving parts. Failure to do so could result in dismemberment or death.

General Operation

Stop motor/engine when adjusting or servicing this equipment. Maintain a safe operating distance from flammable materials.

Sparks from the cutting-action of this machine can ignite flammable materials or vapors.

Check motor rotation.

DO NOT use if drum rotation is incorrect - have a qualified electrician make the necessary change in the main control panel or motor connection box.

Before Starting the Machine

Perform a visual inspection of the entire machine and all daily maintenance according to the *Maintenance Schedule*.

Locate and be familiar with all engine/motor and operating controls.

For Gasoline models, obtain the *Engine Manufacturer's Owner's Manual*. Read it and understand it before continuing. Follow the engine manual for break-in instructions.

Use the correct cutters for the job. Be sure cutter drum is balanced, the number, size and type of cutter wheels are correct.

Be sure all fasteners are tight and secure, check for signs of metal cracking or fatigue, inspect for damage to electrical wiring, damage to fuel lines, check bearings, etc.

Be sure all guards are in place.

Inspect work area to determine the presence and location of deck inserts, pipes, columns and objects protruding from the slab surface so that they may be avoided during operation.

Safety warnings and guidelines do not by themselves eliminate danger. They are not given as substitutes for proper accident prevention and good judgment.

Electrical Powered Equipment



For Electric Models - Electric motors must be properly grounded at all times. Check the outlet box to be sure the electrical service is properly grounded. Be sure adequate power is available. Insufficient power will cause a motor to overheat and burn out.

Use only grounded extension cords correctly sized for the current draw and voltage drop (amp rating and length). Never use frayed, damaged, taped or under rated extension cords.



Electrical shock could result in death or serious injury to the operator and damage to the equipment.

Extreme care must be taken when operating electric models with water present: Ensure power cord is properly grounded, is attached to a Ground-Fault-Interrupter (GFI) outlet, and is undamaged.

Check all electrical cables - be sure connections are tight and cable is continuous and in good condition. Be sure cable is correctly rated for both the operating current and voltage of this equipment.

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with qualified electrician or service person if there is any doubt as to whether the outlet is properly grounded. Adhere to all local codes and ordinances.

NOTE: In the event of a malfunction or breakdown, grounding provides a path of least resistance for the electric current to dissipate. The motor is equipped with a grounded plug and must be connected to an outlet that is properly installed and properly grounded. **DO NOT** modify the plug provided on the motor. If the plug does not fit the outlet have a qualified electrician install the proper receptacle.

Switch motor OFF before disconnecting power.

Do not disconnect power by pulling cord. To disconnect, grasp the plug, not the cord.

 
Unplug power cord at the machine when not in use and before servicing.

Starting the Engine/Motor for Electric Models

Be sure the “OFF” button is depressed on the motor starter box.

Hook up the correct voltage/phase electrical power source by plugging into the connector provided. If the cord does not mate with the connector, consult a qualified licensed electrician before continuing.

Verify that the electrical current being supplied is the proper voltage and phase required to run the equipment.



Poisonous Exhaust Gasoline and Propane Powered Models



DO NOT operate any gasoline/propane powered equipment without adequate ventilation. Carbon monoxide is an invisible, odorless gas that can kill.

NEVER REFUEL A HOT ENGINE OR AN ENGINE WHILE IT IS RUNNING.
Only refuel a cool “stopped” engine in a well-ventilated area. Properly clean any spilled fuel before starting the engine.



Gasoline is extremely flammable and poisonous. It should only be dispensed in well ventilated areas, and with a cool engine.



Propane is extremely flammable.

Engine exhaust from this product contains chemicals known to cause cancer, birth defects or other reproductive harm.



Small gasoline engines produce high concentrations of carbon monoxide (CO). Gasoline or propane powered equipment should not be used in enclosed or partially enclosed areas. Symptoms of CO poisoning include, headache, nausea, weakness, dizziness, visual problems and loss of consciousness. If symptoms occur get into fresh air and seek medical attention immediately.

Gasoline Models - Consult the Engine Manufacturer's Owner's Manual and follow the directions for starting the engine and allow the engine to warm up.

Propane Models - Propane models use a vapor withdrawal system. Operate the propane engine much like you would the gasoline model. Be sure propane tank is positioned correctly.

Turn on main fuel valve at propane tank.

Check all connections for tightness and leaks.

If you detect an odor, IMMEDIATELY shut off the main fuel valve and consult a qualified LP-gas service person or SRT COMPANY directly.

NEVER check for propane leaks using an open flame. Instead, use a leak-testing solution.

NEVER allow propane fumes to escape in a closed area; propane is heavier than air and will "settle."

To start this propane powered equipment, open the main fuel valve located on the propane tank.

Open the throttle wide open and start the engine.

NOTE: Always turn off the main fuel valve on the propane tank when equipment is not being used.

Refer to the Engine/Motor Manufacturer's Owner's Manual for maintenance information specific to the engine/motor used.

Dust Warning



Some dust created by grinding and other construction activities contains chemicals known to cause cancer, birth defects, or other reproductive harm.

Some examples of these chemicals are:

- Lead from lead-based paints
- Crystalline silica from concrete and other masonry products

Your risk of exposure to these chemicals varies depending on how often you do this type of work.



To reduce your risk work in a well ventilated area, use a dust control system, such as an industrial-style vacuum, and wear approved personal safety equipment, such as a dust/particle respirator designed to filter out microscopic particles.

Dry Grinding

Dry Grinding creates a large volume of airborne dust. For health reasons, the operator should wear an applicable respirator. The dust may contain chemicals known to cause serious illnesses, including Silicosis - a fatal disease of the lungs.

Check the chemical properties of the material to be removed and follow all EPA/OSHA regulations.

An Industrial vacuum, capable of handling high volume of fine dust, should be used when dry grinding with this machine. If the material being used is hazardous or contains Silica - the vacuum unit should be capable of removing Silica and hazardous particles of less than 3 microns and if necessary, have the capability to be equipped with a HEPA filter.

Most standard drum type units use a paper bag filter. The dust created during grinding is extremely fine and will clog the filter bag of these units and eventually damage the vacuums motor. In addition, damage to the engine could occur.

The collected debris and filters should be disposed of according to procedures that comply with current EPA/OSHA standards

Serious injury or death could occur if this machine is used improperly.

Maintenance

Proper belt tension must be maintained to transmit the engine/motor power to the cutting drum. An over tensioned belt will shorten belt and bearing life.

A damaged, stretched or excessively worn belt should be replaced.

Check oil level before operation. Change engine oil and filter according to engine manufacturers recommendations.

Engine Air Filter

Important! Clean air filter element daily

Inspect the air filter for excess dust, dirt or damage before the engine is operated. More often if operating in an extremely dusty environment.

Operating the engine with a damaged or dirty air filter, or without an air filter, will allow dirt to enter the engine causing premature engine wear which is not covered under the engine manufacturer's warranty.

Follow the engine manufacturer's procedures for keeping filters in good condition.

Never work on or under equipment without first securing the equipment to prevent it from moving or falling.

Always work on a flat and level surface.

Remove spark plug lead on gasoline/propane engine models or disconnect the supply voltage connector on electric models before performing any maintenance.

Disconnect the power cord at the machine.

Operating Procedures for SC8E (GAS)

Start-Up

- Add oil and gasoline to the machine.
- Move the fuel valve lever to the ON position.
- Move the choke lever to the CLOSED position (cold engine).
- Move the throttle lever 1/3 of the way toward the FAST position.
- Turn the engine switch to the ON position.
- Operate the starter by lightly pulling the starter grip until you feel resistance, then pull briskly.
- Gently return the starter grip.
- Lower drum and begin grinding.
- Read the following additional information before operating your scarifier.

Caution: Never tilt the unit back on the handle. Oil will flow into the cylinder head and could severely damage the motor and void the warranty.

Drive Motor/Engine:

The internal combustion engines are supplied without fuel or motor oil. Therefore, be sure to fill them as instructed in the manufacturer's manual. If the motor suddenly stops, the oil could be too low or it may have been overfilled.

Caution: Start the motor ONLY when the cutter drum assembly is in the raised position and the parking brake on.

Cutter/Drum Configuration

Check to make sure that the drum is configured with the cutters we recommend for the application in question. When working with special milling cutters, be extra careful about the correct direction of drum rotation and correct cutter installation. Never tip the machine on its back to look at the cutters. This can be done quickly and easily by removing the endplate. When putting the endplate back on the machine, make certain to check the tightening torque of cover nuts.

Caution: To avoid bearing damage, repeat this check of the cover nuts from time to time!

Working with the Scarifier:

To engage the drum, lift the black handle up and proceed in forward motion with the lever. Once the drum engages, you can go lower for more aggressive cutting or back up for lighter scarifying. For fine-tuning of the adjustment depth, turn the black dial clockwise until the desired adjustment is reached.

Caution: Do not lower the black handle too deep. This will NOT increase productivity. When the depth is set correctly, the machine will run smoothly.

To stop scarifying, lift the black handle up and proceed in a backward motion until the lever is in the uppermost position

Changing the cutter drum:

Always be sure to switch off the machine before removing the endplate. This will prevent any flying debris from injuring the worker. Remove the cover nuts from the endplate, and then remove the endplate to expose the cutter drum assembly.

Dust Control:

Should dust control be of concern, please contact Stripe Removal Technologies to inquire about our powerful dust control vacuums. The SC8E can be used with an optional 2" vacuum connection.

If you need further assistance, please call our toll free number 1-877-2056053.

Cutter and Flail Shaft Recommendations



- The above flail shafts are showing excessive wear. These shafts should have been replaced much earlier.

To a great extent, economical use of cutter drums depends upon proper maintenance. Changing flail shafts before they become excessively worn and begin to oval out the shaft holes can significantly increase the life of the drum. If you run a machine with badly worn flail shafts you can easily destroy a drum in just a few hours. These shafts are only surface hardened in order to maintain their internal strength. This is why it is important to replace them as soon as the grooves are 1/5 of an inch or 5mm deep.

Changing the shafts early provides the following advantages:


- The drum shaft holes will not wear as fast thus increasing drum life.
- Breakage of shafts can be avoided, thus saving a great deal of downtime refitting the machine.

Recommendations:

- When working with five or eight point Tungsten Carbide tipped cutters or special milling cutters, replace the shafts every fifteen to twenty hours of operation.
- When working with steel cutters change the shafts every time new cutters are installed.
- Change the entire cutter/drum assembly after 3 sets of cutters have been used up, if not sooner.



- Direction of Rotation for Milling Cutters -

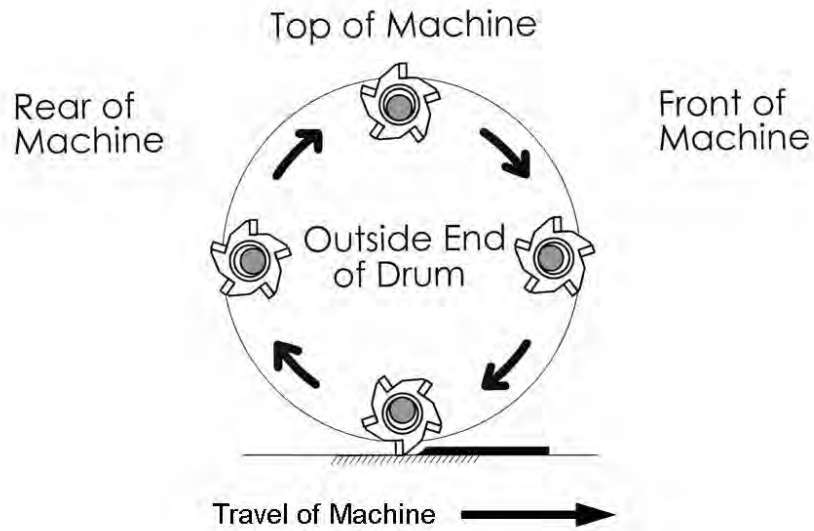

Correct rotation of the Milling Cutters is critical to successful resurfacing and to insure maximum wear life. Drum and cutter assembly should be mounted so that cutters are rotating towards the front of the machine as indicated above.


Incorrect rotation can lead to premature wear and early failure.

Note: These Milling Cutters were originally designed by engineers for the removal of specialty coatings. Some examples of these coatings are: Elastomerics, Thermoplastics, Urethane, Rubberized and Asphalt base coatings.

Milling Cutters are high quality tools and as such should be applied carefully. They are not normally appropriate for aggressive milling or grinding of concrete.

Stripe Removal Technologies
877.205.6053
www.striperemovaltechnologies.com

SC8E Gas

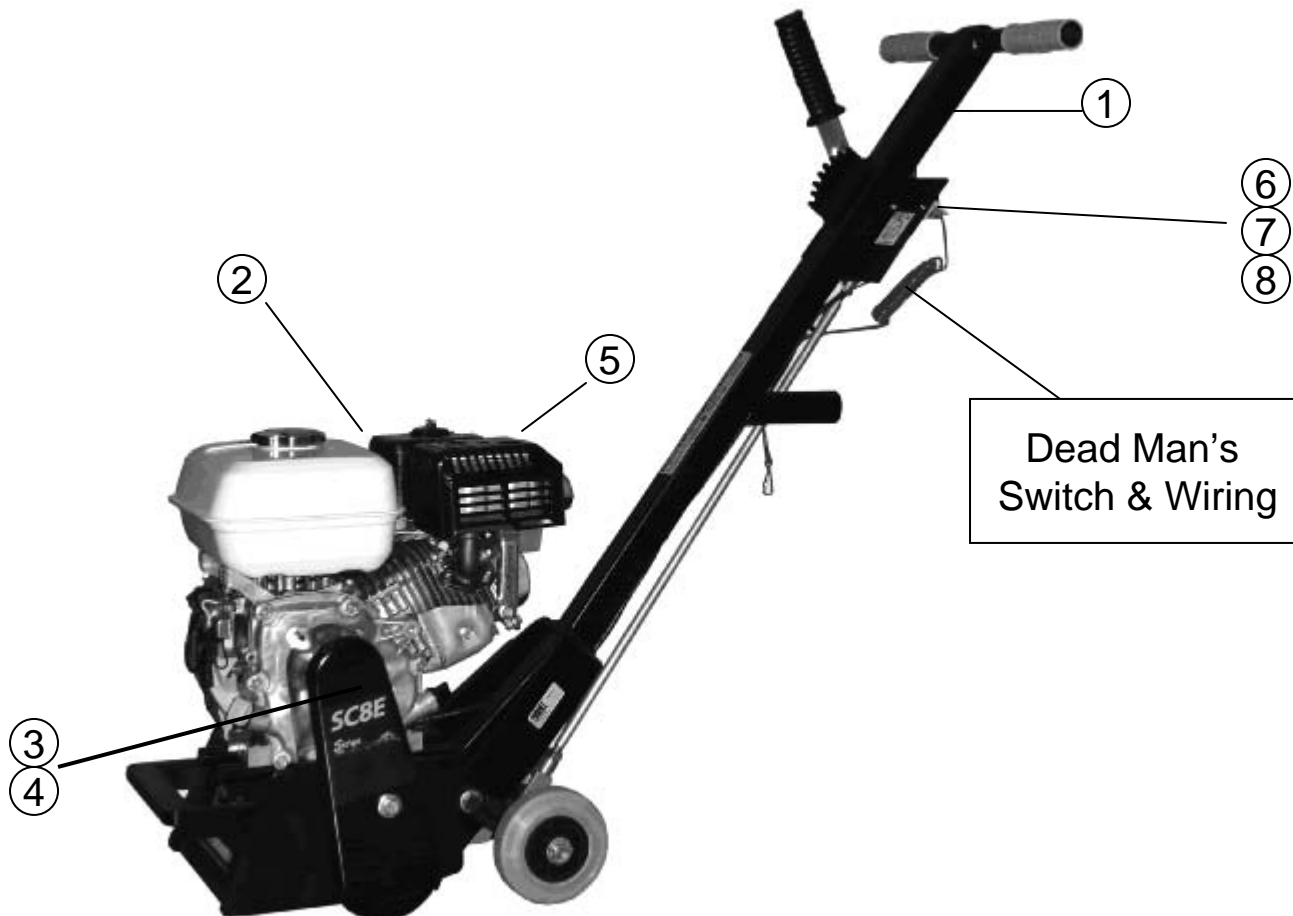

| SC8E Gas SC.08.020 | | | |
|-------------------------------|----------------|--|-----------------|
| Item No | Part No | Description | Quantity |
| 1 | SC.08.000 | Black SC8E Chassis | 1 |
| 2 | HON.GX160 | 5.5 HP GX160 FR 200 Engine | 1 |
| 3 | NB.10.250 | 5/16 -24 X 3/4 Hex Screw | 1 |
| 4 | NB.30.401 | 5/16 X 30 Fender Washer | 1 |
| 5 | HON.2026227 | Muffler Deflector (comes with HON.GX160) | 1 |
| 16 | SC.08.115 | Upper Toothed Pulley FR200 SC8E Gas | 1 |

Emergency Stop Bracket

| | | | |
|---|-----------|---------------------------------------|---|
| 6 | NB.19.101 | 8-32 X 3/4 Pan Head Screw | 2 |
| 7 | NB.20.133 | 8-32 Nyloc Nut | 2 |
| 8 | 795.00.76 | Mounting Emergency Stop Bracket FR200 | 1 |


Dead Man's Switch & Wiring

| | | | |
|----|-------------|--|------|
| 9 | 795.00.12 | 11" X 0.125" Black Zip Tie | 2 |
| 10 | 795.00.19 | Emergency Stop Switch Tether with Cord | 1 |
| 11 | 795.00.20 | 16-14 AWG Bullet Connector Blue Nylon | 1 |
| 12 | 795.00.21 | 22-18 AWG Ring-1/4" Stud Red Nylon | 1 |
| 13 | 795.00.22 | 22-18 AWG Butt Connector Red Vinyl | 2 |
| 14 | 795.00.23 | 3/8" Heat Shrink Tubing Black | 4 in |
| 15 | AIW.16X2CRD | Power Cord 16/2 | 6 ft |

*Honda engine

*Orient the upper pulley nipple toward motor

**SC8E 110V
Single Phase**

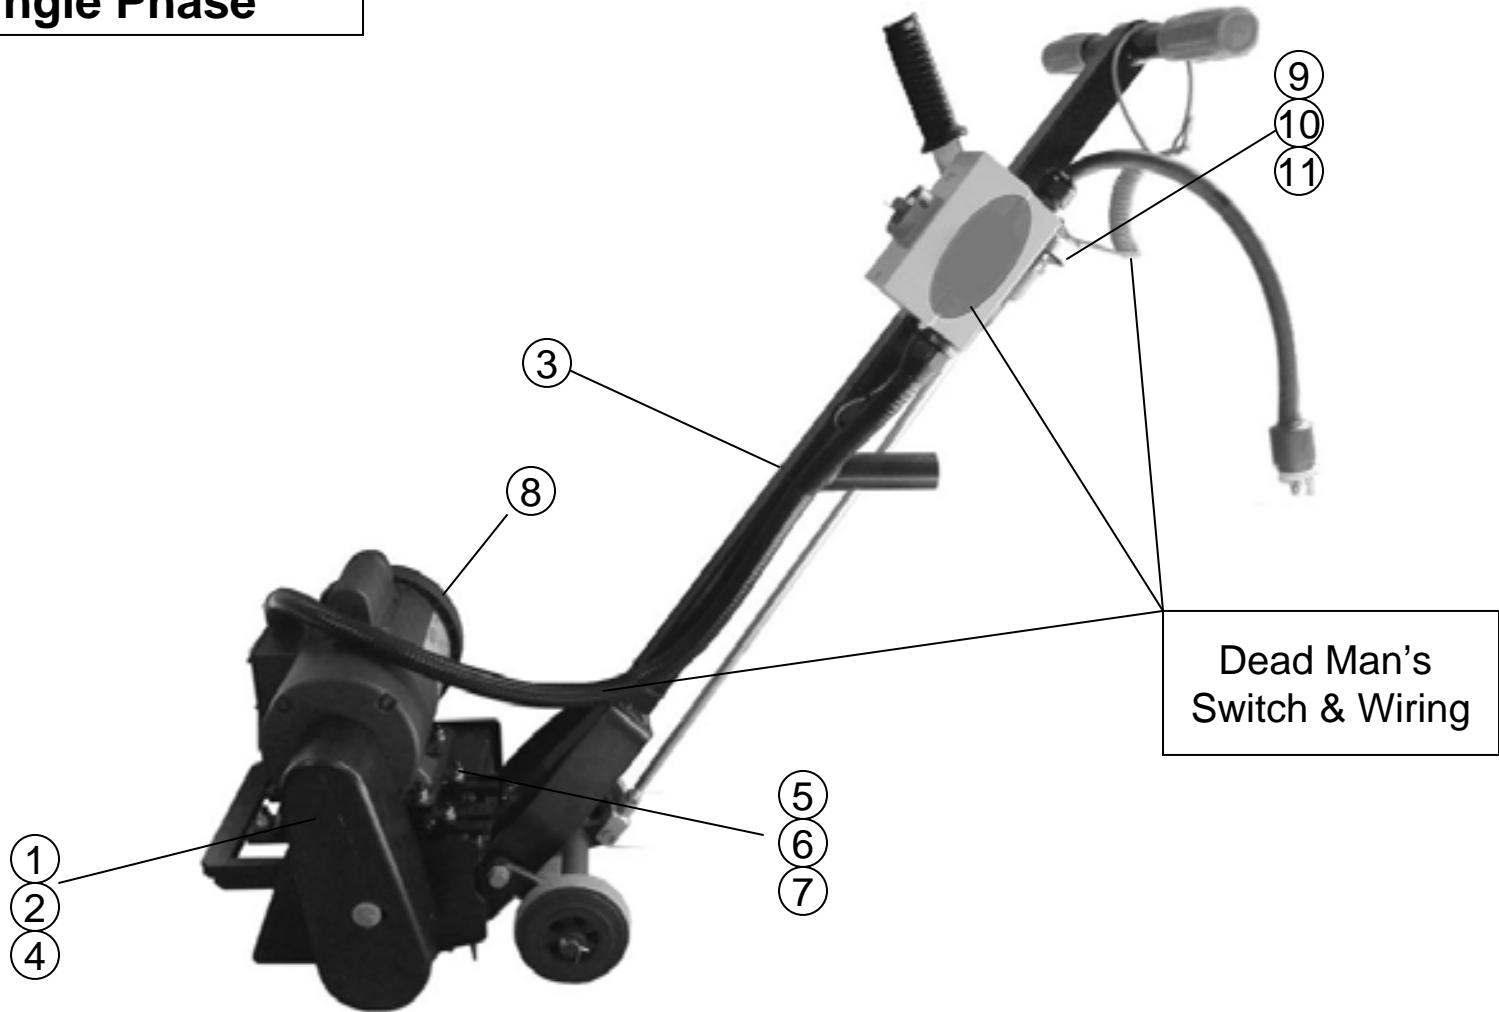

| SC8E 110V Single Phase SC.08.040 | | | |
|---|----------------|-------------------------------------|-----------------|
| Item No | Part No | Description | Quantity |
| 1 | NB.10.114 | M8 X 20 Hex Head Screw | 1 |
| 2 | NB.30.403 | M8 X 30 Fender Washer | 1 |
| 3 | SC.08.000 | Black SC8E Chassis | 1 |
| 4 | SC.08.113 | Upper Toothed Pulley FR200 | 1 |
| 5 | SC.08.117 | T-BOLT Short FR 200 SC8E | 8 |
| 6 | SC.08.120 | Mounting Pair Rail FR 200 SC8E | 1 |
| 7 | SC.08.121 | Electric Mounting Plate FR 200 SC8E | 2 |
| 8 | ZZ.03500T | Electric Motor 1 PH 110V FR200 SC8E | 1 |

Emergency Bracket

| | | | |
|----|-----------|---------------------------------------|---|
| 9 | NB.19.101 | 8-32 X 3/4 Pan Head Screw | 2 |
| 10 | NB.20.133 | 8-32 Nyloc Nut | 2 |
| 11 | 795.00.76 | Mounting Emergency Stop Bracket FR200 | 1 |


Dead Man's Switch & Wiring

| | | | |
|----|-------------|--|------|
| 12 | 795.00.04 | 3/4" Liquidtight Flexible Conduit | 4 ft |
| 13 | 795.00.05 | 3/4" L/T Bullet Connector LT75P | 2 |
| 14 | 795.00.06 | 3/4" W/R Black SLRN21 | 1 |
| 15 | 795.00.08 | 3/4-IN 45 Bullet L/T Connector | 1 |
| 16 | 795.00.10 | 18 Gauge Wire Nut Yellow | 3 |
| 17 | 795.00.12 | Zip Tie Black 11" X 0.125" | 2 |
| 18 | 795.00.19 | Emergency Stop Switch Tether with Cord | 1 |
| 19 | 795.00.20 | 16-14 AWG Bullet Connector Blue Nylon | 1 |
| 20 | 795.00.21 | 22-18 AWG Ring-1/4" Stud Red Nylon | 1 |
| 21 | 795.00.22 | 22-18 AWG Butt Connector Red Vinyl | 2 |
| 22 | 795.00.23 | 3/8" Heat Shrink Tubing Black | 4 in |
| 23 | AIW.10X3CRD | Power Cord 10/3 | 6 ft |
| 24 | AIW.16X2CRD | Power Cord 16/2 | 1 ft |
| 25 | ELE.33031 | Twistlock Male Plug L5-15P | 1 |
| 26 | MCC.27AA110 | Shunt Relay Module 110V for 25A Switch | 1 |
| 27 | MCC.27.25A | 25 Amp Switch | 1 |
| 28 | MCC.27.KAZ | Switch Enclosure Box for 25 Amp | 1 |
| 29 | NB.19.101 | 8-32 X 3/4 Pan Head Screw | 2 |
| 30 | NB.20.133 | 8-32 Nyloc Nut | 2 |

*Orient the upper pulley nipple outward motor

*Align bolts through Motor Slots

**SC8E 230V
Single Phase**

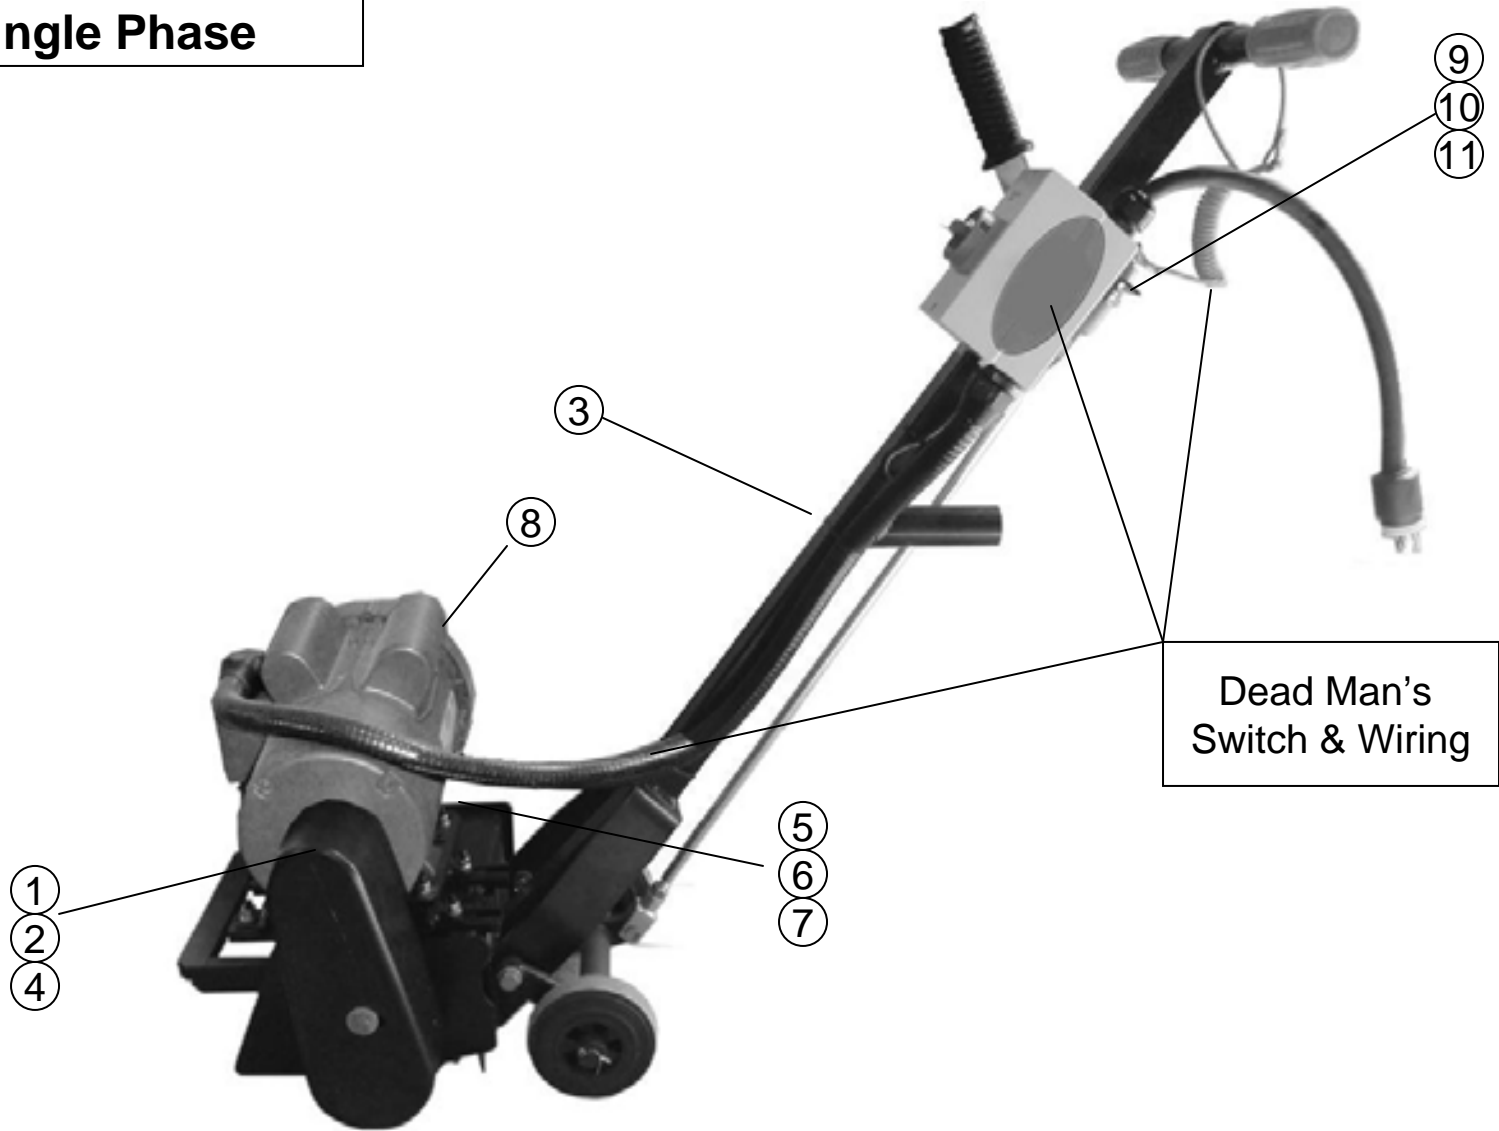

| SC8E 230V Single Phase SC.08.042 | | | |
|---|----------------|--|-----------------|
| Item No | Part No | Description | Quantity |
| 1 | NB.10.114 | M8 X 20 Hex Screw | 1 |
| 2 | NB.30.403 | M8 X 30 Fender Washer | 1 |
| 3 | SC.08.000 | Black SC8E Scarifier Chassis | 1 |
| 4 | SC.08.113 | Upper Toothed Electric Pulley FR200 | 1 |
| 5 | SC.08.117 | Short T-bolt FR 200 | 8 |
| 6 | SC.08.120 | Mounting Pair Rail FR200 | 1 |
| 7 | SC.08.121 | Electric Mounting Plate FR200 | 2 |
| 8 | ZZ.L3515T | Electric Motor 1 Phase 230V FR200 SC8E | 1 |

Emergency Bracket

| | | | |
|----|-----------|---------------------------------------|---|
| 9 | NB.19.101 | 8-32 X 3/4 Pan Head Screw | 2 |
| 10 | NB.20.133 | 8-32 Nyloc Nut | 2 |
| 11 | 795.00.76 | Mounting Emergency Stop Bracket FR200 | 1 |


Dead Man's Switch & Wiring

| | | | |
|----|----------------|--|------|
| 12 | 795.00.04 | 3/4" Liquidtight Flexible Non-metallic Conduit | 4 ft |
| 13 | 795.00.05 | 3/4" L/T Bullet Connector LT75P | 1 |
| 14 | 795.00.06 | 3/4" W/R Black SLRN21 | 1 |
| 15 | 795.00.08 | 3/4-IN 45 L/T Bullet Connector | 3 |
| 16 | 795.00.10 | 18 Yellow Gauge Wire Nut | 1 |
| 17 | 795.00.12 | Black Zip Tie 11" X 0.125" | 1 |
| 18 | 795.00.19 | Emergency Stop Switch Tether with Cord | 1 |
| 19 | 795.00.22 | 22-18 AWG Butt Connector Red Vinyl | 2 |
| 20 | 795.00.23 | 3/8" Heat Shrink Tubing Black | 4 in |
| 21 | AIW.10X3CRD | Power Cord 10/3 | 6 ft |
| 22 | AIW.16X2CRD | Power Cord 16/2 | 1 ft |
| 23 | MCC.27.16A | 16 Amp Switch | 1 |
| 24 | MCC.27.25AA220 | Shunt Relay Module for 220 V | 1 |
| 25 | MCC.27.KAZ | Switch Enclosure Box for 25A Switch | 1 |
| 26 | NB.19.101 | 8-32 X 3/4 Pan Head Screw | 2 |
| 27 | NB.20.133 | 8-32 Nyloc Nut | 2 |

*drill and tap

*Black = 1+5 White = 4+8

**SC8E 230V
Three Phase**

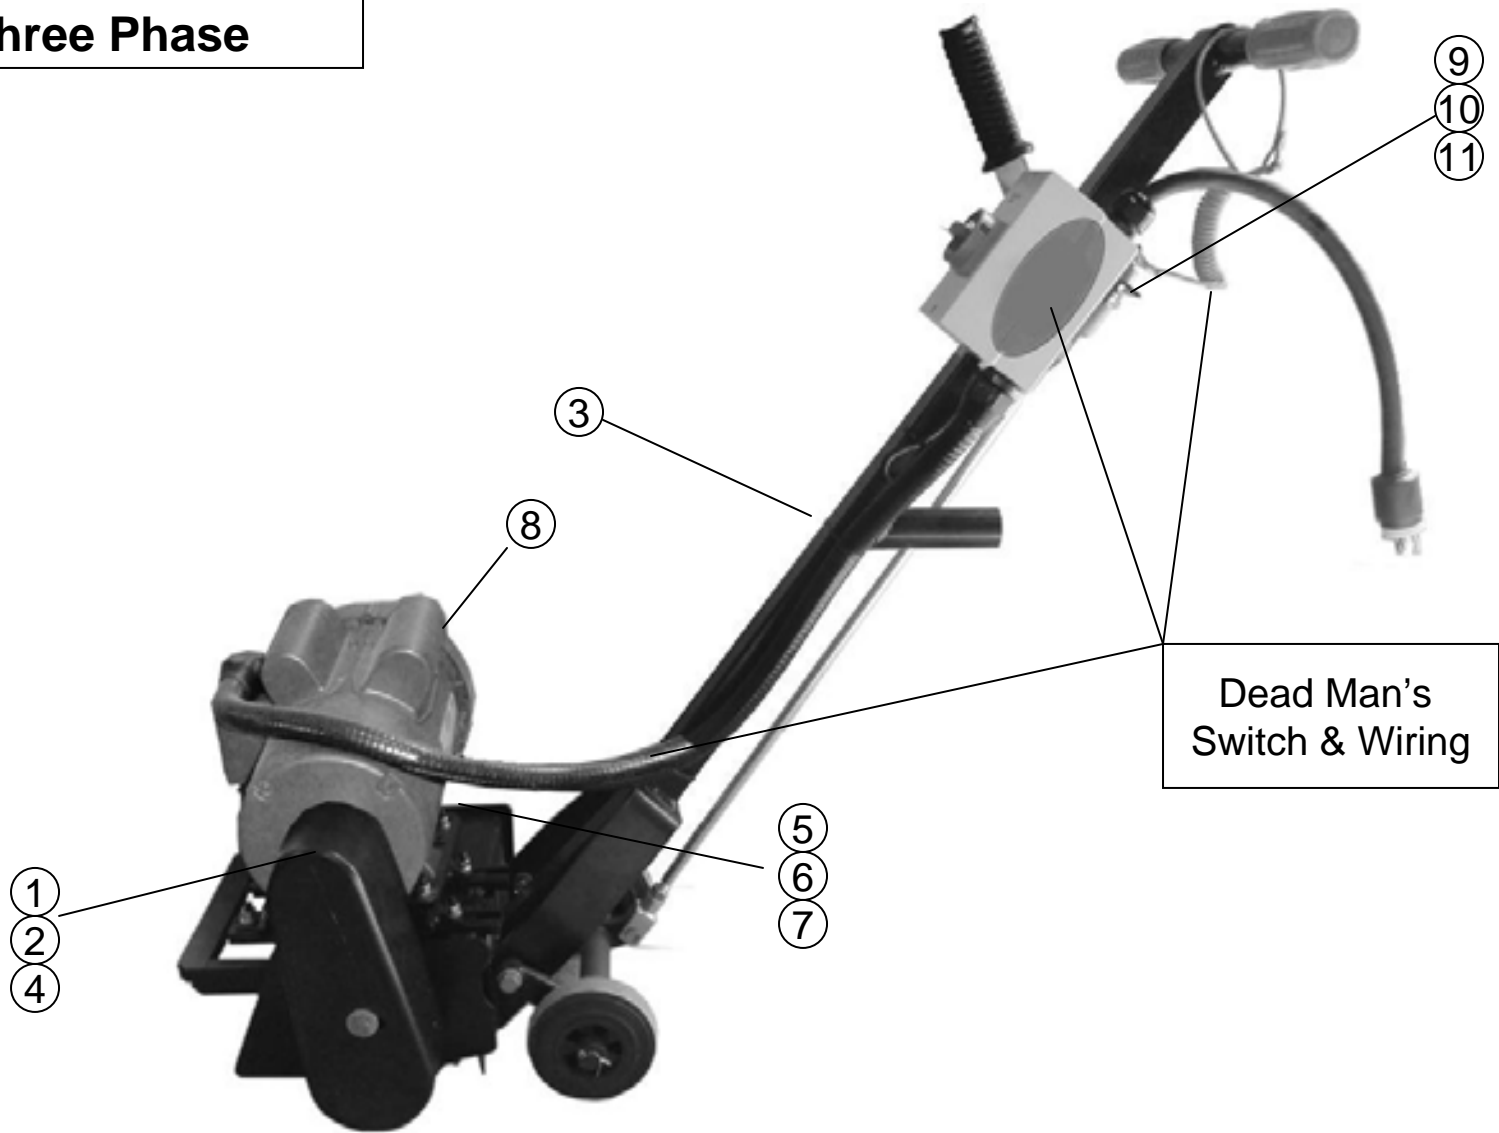

**SC8E 230V Three Phase
SC.08.044**

| Item No | Part No | Description | Quantity |
|---------|-----------|-------------------------------------|----------|
| 1 | NB.10.114 | M8 X 20 Hex Screw | 1 |
| 2 | NB.30.403 | M8 X 30 Fender Washer | 1 |
| 3 | SC.08.000 | Black SC8E Scarifier Chassis | 1 |
| 4 | SC.08.113 | Upper Toothed Electric Pulley FR200 | 1 |
| 5 | SC.08.117 | Short T-bolt FR 200 | 8 |
| 6 | SC.08.120 | Mounting Pair Rail FR200 | 1 |
| 7 | SC.08.121 | Electric Mounting Plate FR200 | 2 |
| 8 | ZZ.M3559T | Electric Motor 3 Phase FR 200 SC8E | 1 |

Emergency Bracket


| | | | |
|----|-----------|---------------------------------------|---|
| 9 | NB.19.101 | 8-32 X 3/4 Pan Head Screw | 2 |
| 10 | NB.20.133 | 8-32 Nyloc Nut | 2 |
| 11 | 795.00.76 | Mounting Emergency Stop Bracket FR200 | 1 |

Dead Man's Switch & Wiring

| | | | |
|----|-------------|--|------|
| 12 | 795.00.04 | 3/4" Liquidtight Flexible Conduit | 4FT |
| 13 | 795.00.05 | 3/4" L/T Bullet Connector LT75P | 1 |
| 14 | 795.00.06 | 3/4" W/R Black SLRN21 | 1 |
| 15 | 795.00.08 | 3/4-IN 45 Bullet L/T Connector | 3 |
| 16 | 795.00.10 | 18 Gauge Wire Nut Yellow | 1 |
| 17 | 795.00.11 | 20 Gauge Wire Nut Orange | 1 |
| 18 | 795.00.12 | Zip Tie Black 11" X 0.125" | 2 |
| 19 | 795.00.19 | Emergency Stop Switch Tether with Cord | 1 |
| 20 | 795.00.20 | 16-14 AWG Bullet Connector Blue Nylon | 1 |
| 21 | 795.00.21 | 22-18 AWG Ring-1/4" Stud Red Nylon | 1 |
| 22 | 795.00.22 | 22-18 AWG Butt Connector Red Vinyl | 2 |
| 23 | 795.00.23 | 3/8" Heat Shrink Tubing Black | 4 IN |
| 24 | AIW.12X4CRD | Power Cord 12/4 | 6 FT |
| 25 | AIW.16X2CRD | Power Cord 16/2 | 1 FT |
| 26 | MCC.27AA220 | Shunt Relay Module for 220 V | 1 |
| 27 | MCC.27.10A | 10 Amp Switch | 1 |
| 28 | MCC.27.KAZ | Switch Box Enclosure for 25A Switch | 1 |
| 29 | NB.19.101 | 8-32 X 3/4 Pan Head Screw | 2 |
| 30 | NB.20.133 | 8-32 Nyloc Nut | 2 |

*Orient the upper pulley, nipple toward motor

**SC8E 460V
Three Phase**

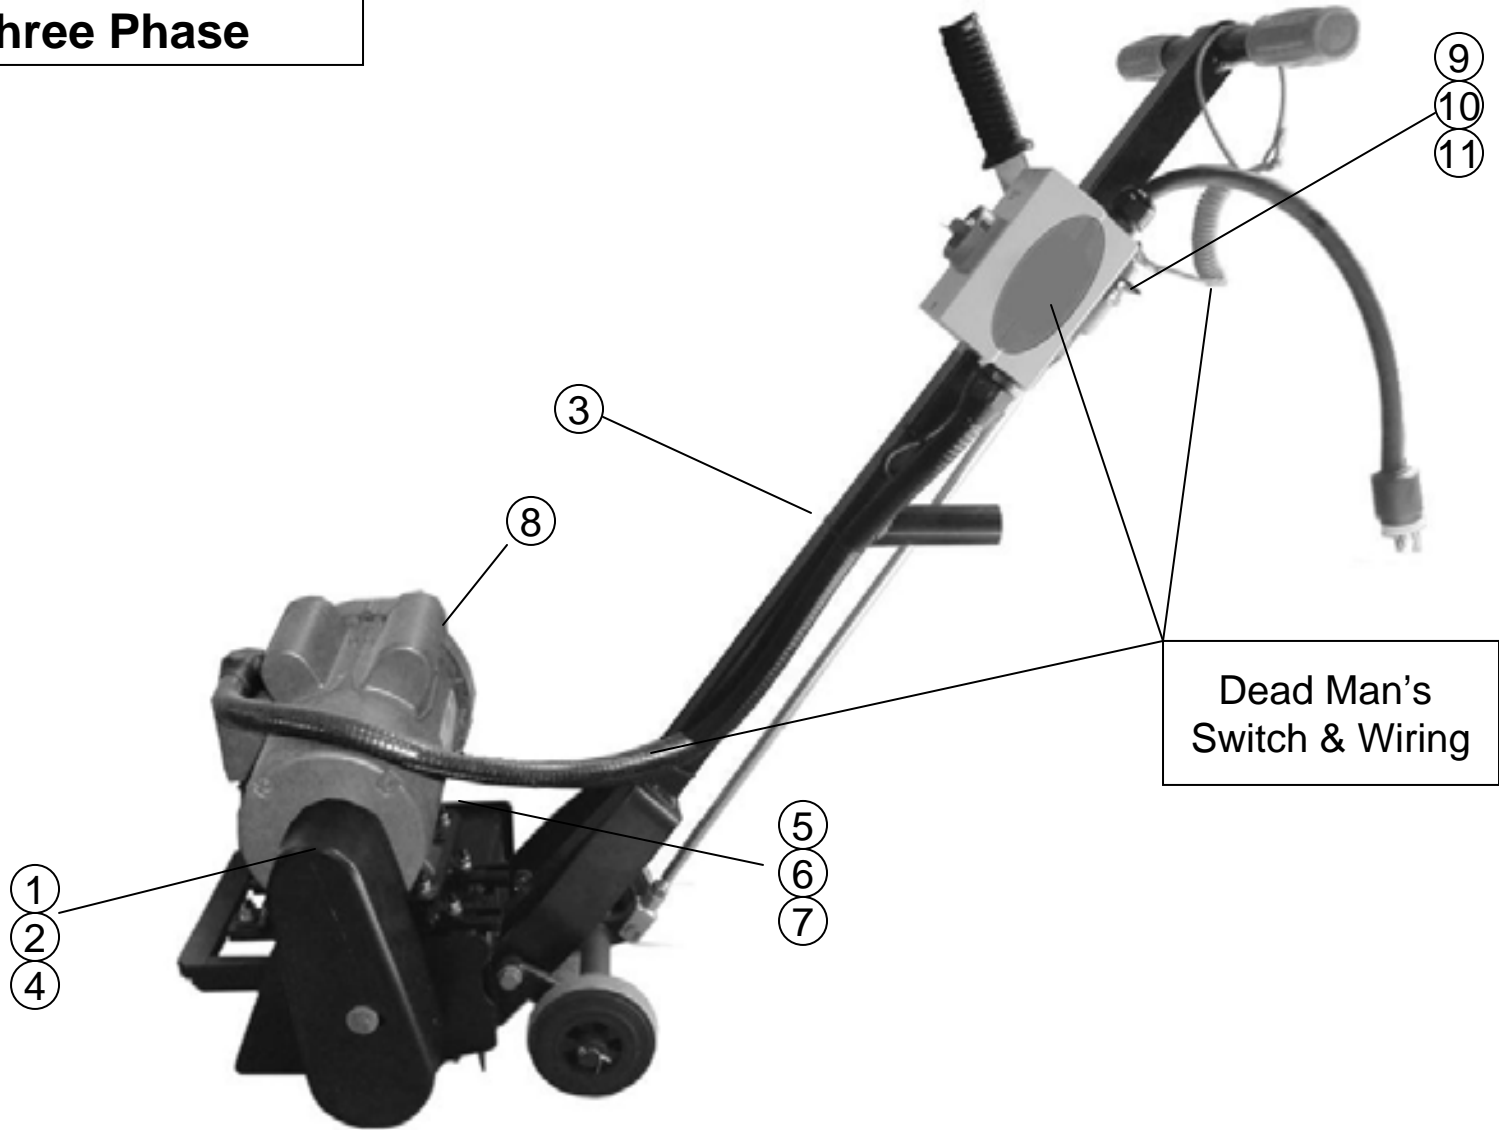

**SC8E 460V Three Phase
SC.08.046**

| Item No | Part No | Description | Quantity |
|---------|-----------|-------------------------------------|----------|
| 1 | NB.10.114 | M8 X 20 Hex Screw | 1 |
| 2 | NB.30.403 | M8 X 30 Fender Washer | 1 |
| 3 | SC.08.000 | Black SC8E Scarifier Chassis | 1 |
| 4 | SC.08.113 | Upper Toothed Electric Pulley FR200 | 1 |
| 5 | SC.08.117 | Short T-bolt FR 200 | 8 |
| 6 | SC.08.120 | Mounting Pair Rail FR200 | 1 |
| 7 | SC.08.121 | Electric Mounting Plate FR200 | 2 |
| 8 | ZZ.M3559T | Electric Motor 3 Phase FR 200 SC8E | 1 |

Emergency Bracket


| | | | |
|----|-----------|---------------------------------------|---|
| 9 | NB.19.101 | 8-32 X 3/4 Pan Head Screw | 2 |
| 10 | NB.20.133 | 8-32 Nyloc Nut | 2 |
| 11 | 795.00.76 | Mounting Emergency Stop Bracket FR200 | 1 |

Dead Man's Switch & Wiring

| | | | |
|----|-------------|--|------|
| 12 | 795.00.04 | 3/4" Liquidtight Flexible Conduit | 4FT |
| 13 | 795.00.05 | 3/4" L/T Bullet Connector LT75P | 1 |
| 14 | 795.00.06 | 3/4" W/R Black SLRN21 | 1 |
| 15 | 795.00.08 | 3/4-IN 45 Bullet L/T Connector | 3 |
| 16 | 795.00.10 | 18 Gauge Wire Nut Yellow | 1 |
| 17 | 795.00.11 | 20 Gauge Wire Nut Orange | 1 |
| 18 | 795.00.12 | Zip Tie Black 11" X 0.125" | 2 |
| 19 | 795.00.19 | Emergency Stop Switch Tether with Cord | 1 |
| 20 | 795.00.20 | 16-14 AWG Bullet Connector Blue Nylon | 1 |
| 21 | 795.00.21 | 22-18 AWG Ring-1/4" Stud Red Nylon | 1 |
| 22 | 795.00.22 | 22-18 AWG Butt Connector Red Vinyl | 2 |
| 23 | 795.00.23 | 3/8" Heat Shrink Tubing Black | 4 IN |
| 24 | AIW.12X4CRD | Power Cord 12/4 | 6 FT |
| 25 | AIW.16X2CRD | Power Cord 16/2 | 1 FT |
| 26 | MCC.27AA440 | Shunt Relay Module for 440 V | 1 |
| 27 | MCC.27.63A | 6.3 Amp Switch | 1 |
| 28 | MCC.27.KAZ | Switch Box Enclosure for 25A Switch | 1 |
| 29 | NB.19.101 | 8-32 X 3/4 Pan Head Screw | 2 |
| 30 | NB.20.133 | 8-32 Nyloc Nut | 2 |


*Orient the upper pulley, nipple toward motor

Parts for Belt Guard

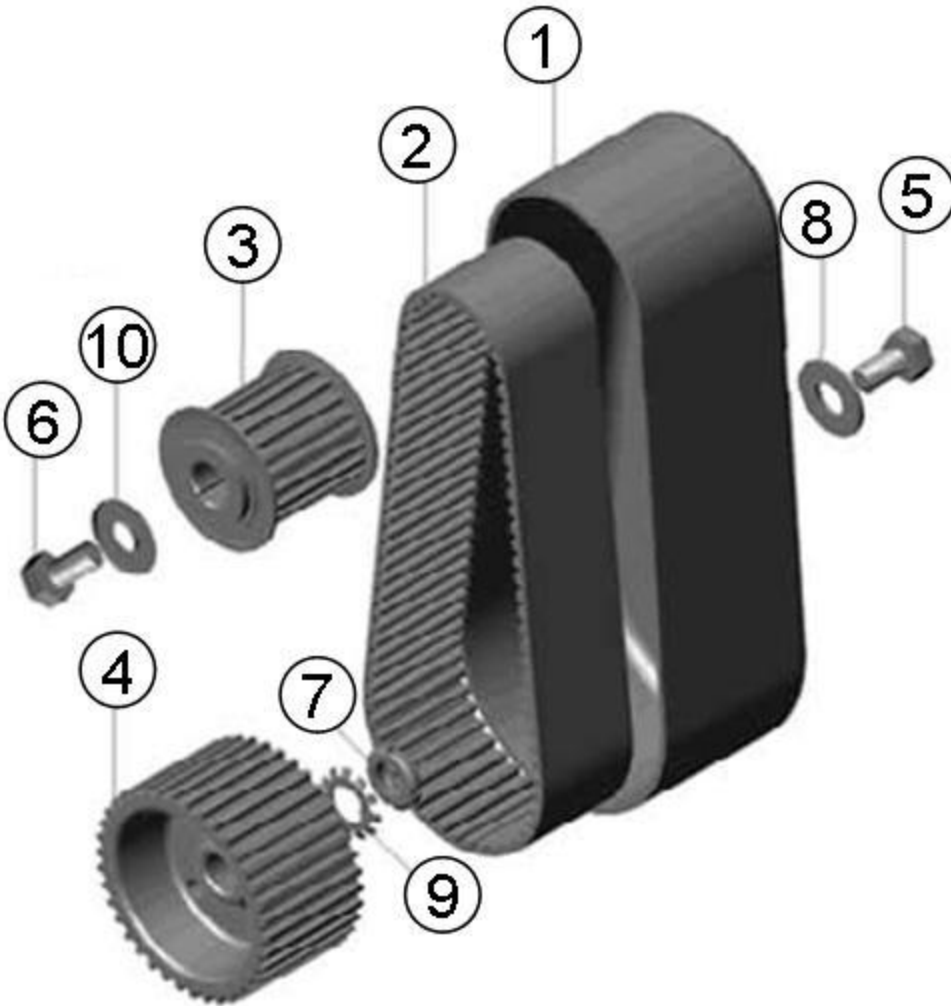


| Belt Guard SC8E | | | |
|------------------------|----------------|---|-----------------|
| Item No | Part No | Description | Quantity |
| 1 | SC.08.118 | Belt Guard | 1 |
| 2 | SC.08.119 | Toothed Belt 640 | 1 |
| 3 | SC.08.113 | Upper Toothed Pulley FR200 SC8E Electrics | 1 |
| 3 | SC.08.115 | Upper Toothed Pulley FR200 SC8E Gas | 1 |
| | HON.1441062 | Key, Drive Shaft FR 200 | 1 |
| 4 | SC.08.203 | Lower Toothed Pulley | 1 |
| 5 | NB.10.126 | Hex M10x16 Hex Screw | 1 |
| 6 | NB.10.250 | 5/14-24x3/4 Hex Screw | 1 |
| 7 | NB.20.112 | Shaft Nut | 1 |
| 8 | NB.30.118 | M10 Flat Washer | 1 |
| 9 | NB.30.218 | Safety Washer | 1 |
| 10 | NB.30.401 | 5/16x30 Fender Washer | 1 |

Parts for Handle Bar

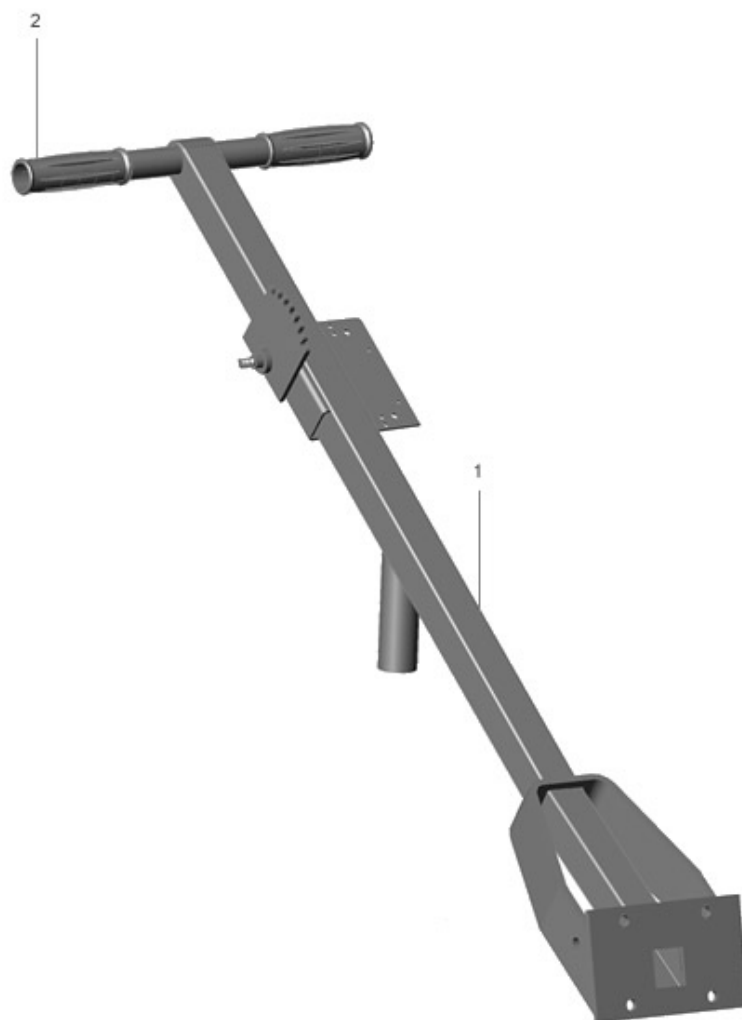


| List of Items for Handle Bar | | | |
|-------------------------------------|--------------------|--------------------|-----------------|
| Number | Part Number | Description | Quantity |
| 1 | SC.08.210 | BAR, HANDLE | 1 |
| 2 | SC.08.211 | GRIP, HANDLE | 2 |

Parts for Housing; Front Wheel; Dust Shield

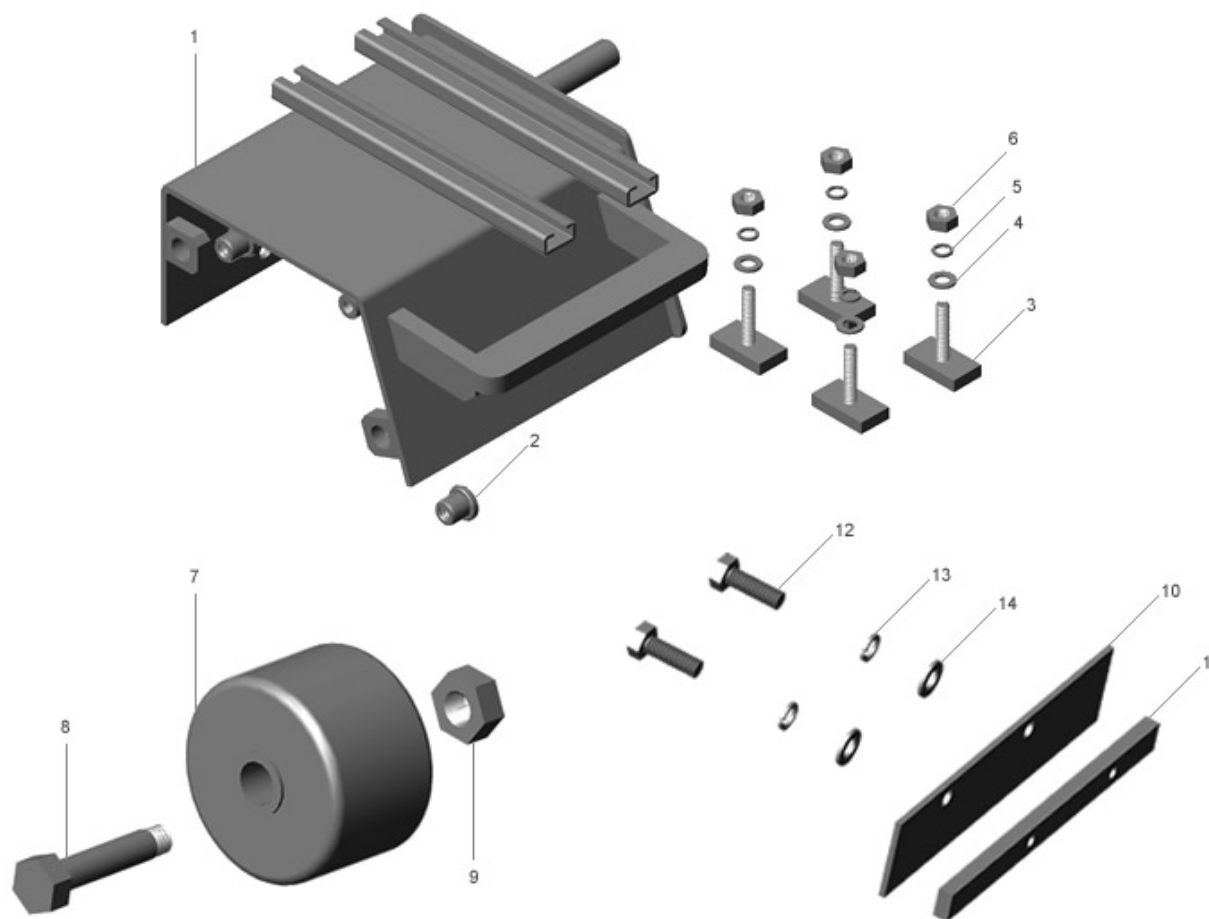


| List of Items for Housing, Front Wheel, Dust Shield | | | |
|--|--------------------|------------------------------------|-----------------|
| Number | Part Number | Description | Quantity |
| 1 | SC.08.207 | HOUSING | 1 |
| 2 | SC.08.208 | BUSHING, CENTERING | 2 |
| 3 | SC.08.116 | T-BOLT, LONG (FOR GAS ENGINE) | 4 |
| Not shown | SC.08.117 | T-BOLT, SHORT (FOR ELECTRIC MOTOR) | 8 |
| Not shown | SC.08.120 | RAILS, MOUNTING FOR ELECTRIC MOTOR | 1 SET |
| 4 | NB.30.118 | WASHER, FLAT M8 | 4 |
| 5 | NB.30.212 | WASHER, LOCK M8 | 4 |
| 6 | NB.20.114 | NUT, HEXAGONAL M8 | 4 |
| 7 | SC.08.901 | WHEEL, FRONT | 1 |
| 8 | NB.10.124 | SCREW, HEXAGONAL M8X60 | 1 |
| 9 | NB.20.114 | NUT, HEXAGONAL M8X.8 | 1 |
| 10 | SC.08.900 | SHIELD, DUST | 1 |
| 11 | SC.08.902 | BAR, CLAMPING | 1 |
| 12 | NB.10.110 | SCREW, HEXAGONAL M10X25 | 2 |
| 13 | NB.30.120 | WASHER, LOCK M10 | 2 |
| 14 | NB.30.110 | WASHER, FLAT M10 | 2 |

Parts for Housing End Plate

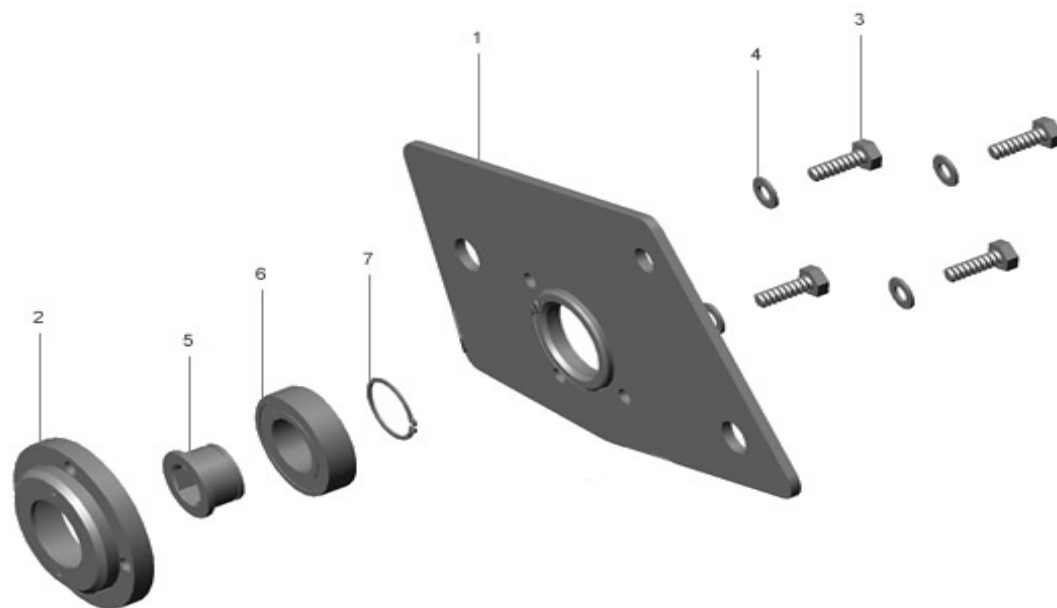


| List of Items for Housing End Plate | | | |
|--|--------------------|-------------------------|-----------------|
| Number | Part Number | Description | Quantity |
| 1 | SC.08.601 | ENDPLATE, HOUSING | 1 |
| 2 | SC.08.602 | FLANGE, BEARING | 1 |
| 3 | NB.10.130 | SCREW, HEXAGONAL M8X16 | 4 |
| 4 | NB.30.212 | WASHER, LOCK M8 | 4 |
| 5 | SC.08.605 | BUSHING, DRIVE | 1 |
| 6 | SC.08.604 | BEARING, ENDPLATE | 1 |
| 7 | NB.40.112 | SNAP RING, EXTERNAL M30 | 1 |

Parts for Hex Drive Shaft

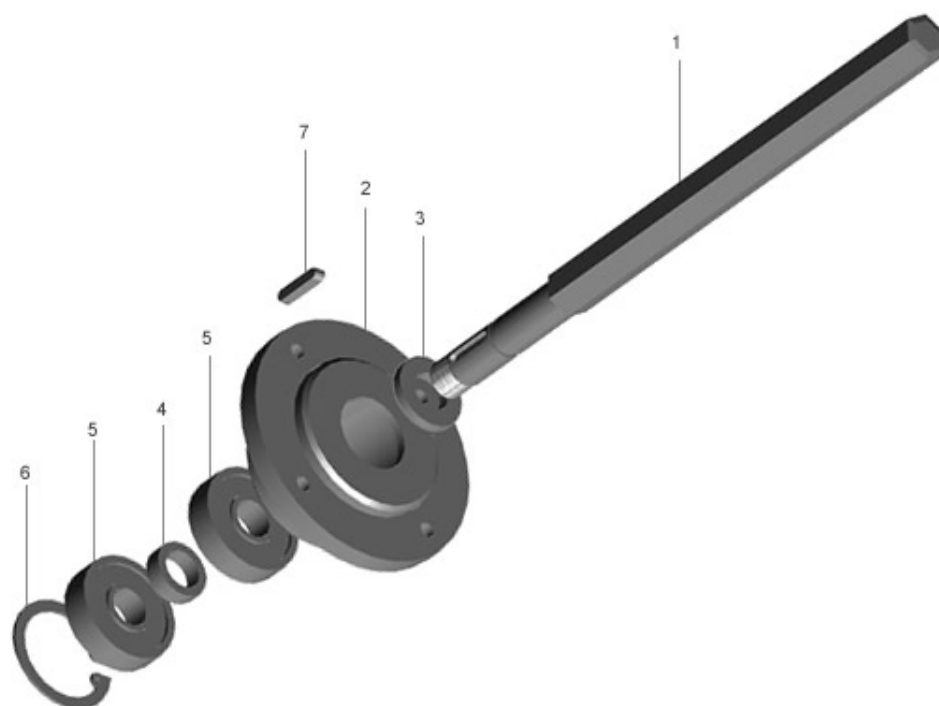


| List of Items for Hex Drive Shaft | | | |
|--|--------------------|---------------------------|-----------------|
| Number | Part Number | Description | Quantity |
| 1 | SC.08.401 | SHAFT, HEXAGONAL DRIVE | 1 |
| 2 | SC.08.402 | HOUSING, BEARING | 1 |
| 3 | SC.08.403 | RING, SPACER | 1 |
| 4 | SC.08.405 | BUSHING, SPACER | 1 |
| 5 | SC.08.404 | BEARING, SEALED 6303 2 RS | 2 |
| 6 | NB.40.111 | CIRCLE CLIP, M47 | 1 |
| 7 | NB.70.111 | KEY, WOODRUFF 5X10X25 | 1 |

Parts for Drum

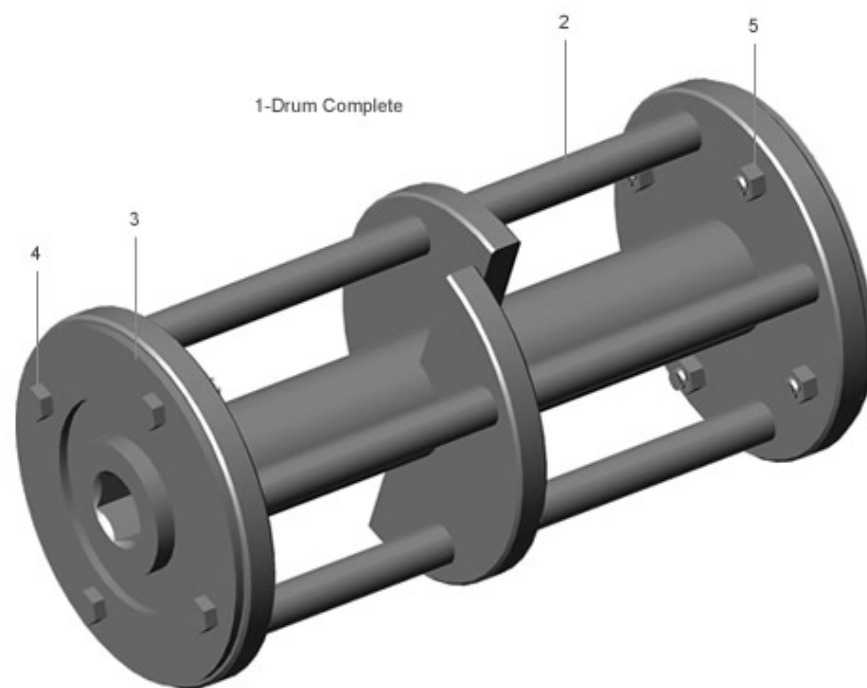


| List of Items for Drum | | | |
|-------------------------------|--------------------|----------------------------|-----------------|
| Number | Part Number | Description | Quantity |
| 1 | SC.08.500 | DRUM, COMPLETE | 1 |
| 2 | SC.08.510 | SHAFT, FLAIL 12MM | 4 |
| 3 | SC.08.507 | PLATE, END | 2 |
| 4 | NB.10.116 | SCREW, HEXAGONAL M6X20 | 8 |
| 5 | NB.20.132 | NUT, NYLON SELF LOCKING M6 | 8 |

Parts for Depth Adjuster Lever

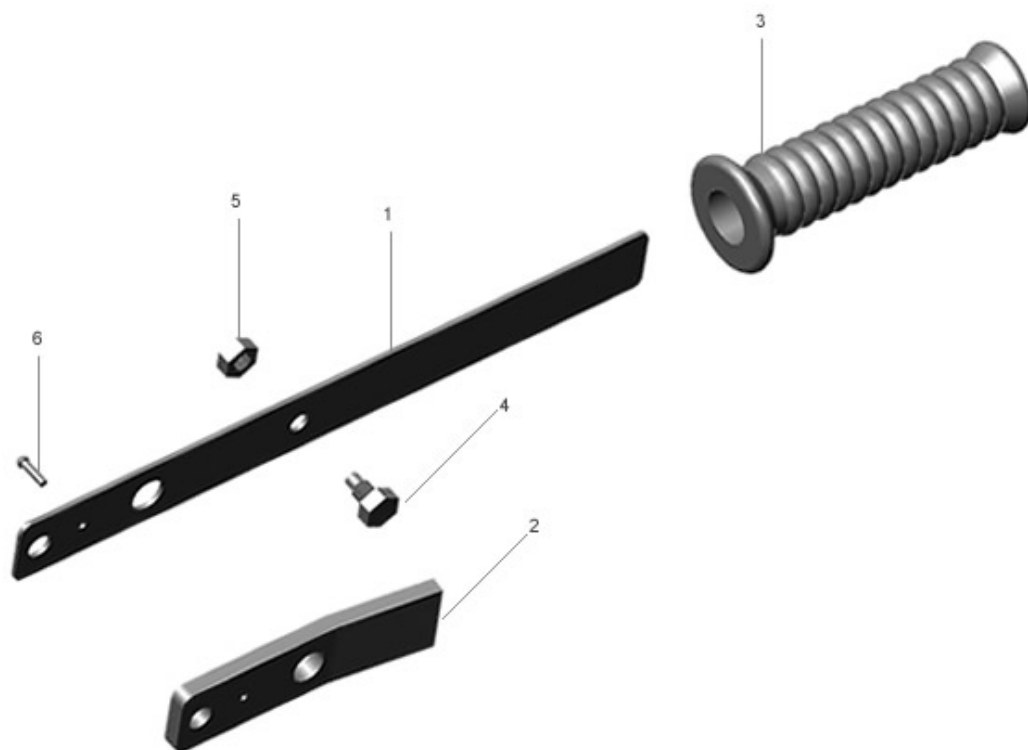


| Parts for Depth Adjuster Lever | | | |
|---------------------------------------|--------------------|-------------------------|-----------------|
| Number | Part Number | Description | Quantity |
| 1 | SC.08.303 | LEVER, DEPTH ADJUSTMENT | 1 |
| 2 | SC.08.304 | PLATE, LOCKING | 1 |
| 3 | SC.08.305 | HANDGRIP, RUBBER | 1 |
| 4 | NB.10.170 | SCREW, HEXAGONAL SET M8 | 1 |
| 5 | NB.20.120 | NUT, HEXAGONAL M8X.5 | 1 |
| 6 | NB.50.126 | RIVET, M4X10 | 1 |

Parts for Depth Adjustment Rod

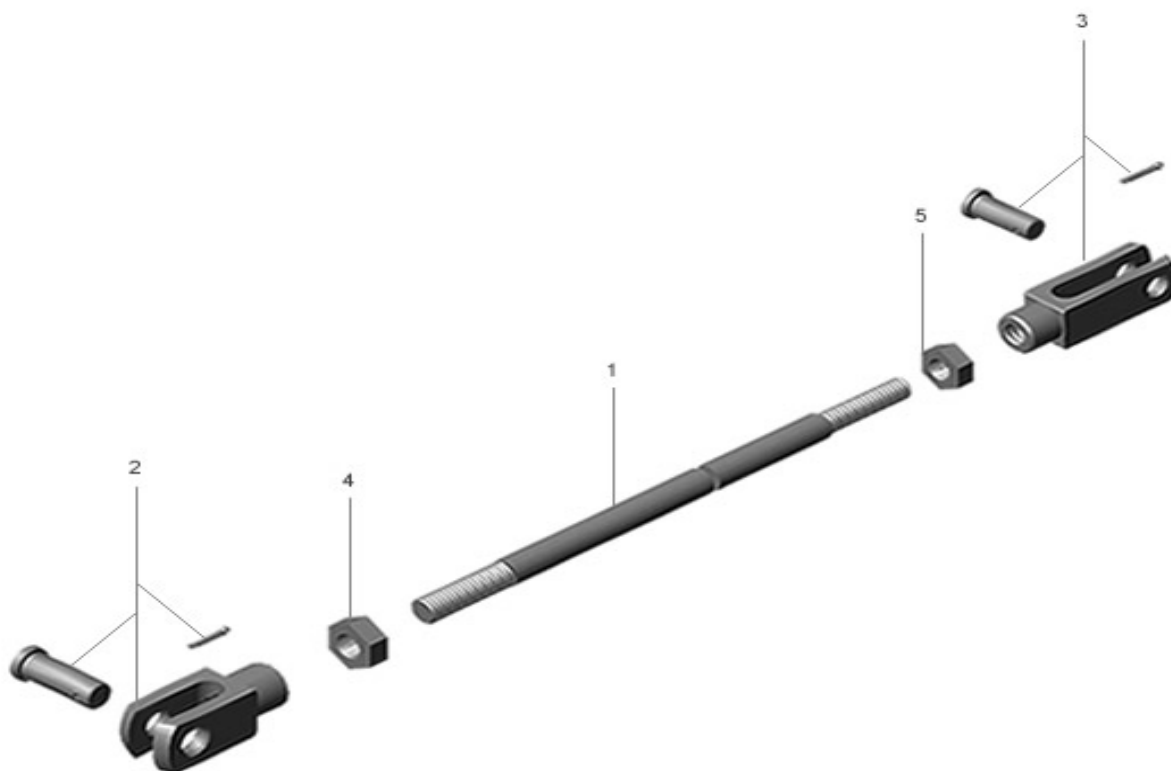

| Parts for Depth Adjustment Rod | | | |
|---------------------------------------|-----------|------------------------|---|
| 1 | SC.08.301 | ROD, DEPTH ADJUSTMENT | 1 |
| 2 | NB.80.111 | JOINT, FORK 12 X 24 | 1 |
| 3 | NB.80.110 | JOINT, FORK 10 X 40 | 1 |
| 4 | NB.20.113 | NUT, HEXAGONAL M12X.8d | 1 |
| 5 | NB.20.115 | NUT, HEXAGONAL M10X.8d | 1 |

Parts for Rear Axle Bracket

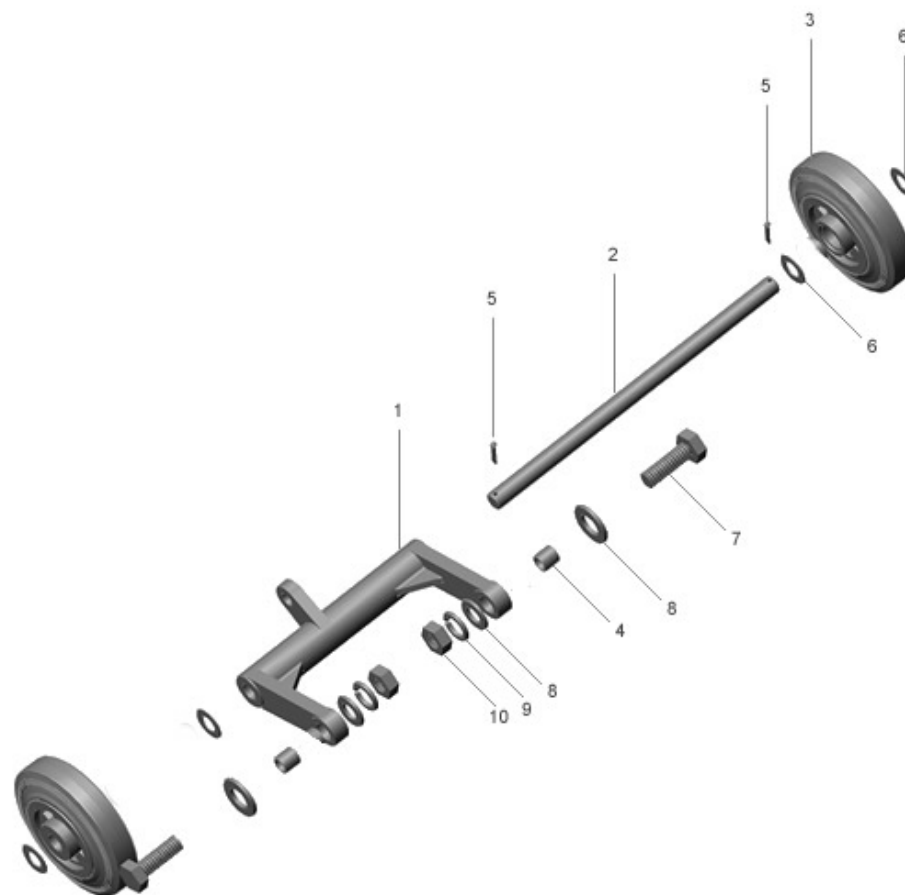

| List of Items for Rear Axle Bracket | | | |
|--|--------------------|-------------------------|-----------------|
| Number | Part Number | Description | Quantity |
| 1 | SC.08.801 | BRACKET, AXLE | 1 |
| 2 | SC.08.802 | AXLE | 1 |
| 3 | SC.08.803 | WHEEL | 2 |
| 4 | SC.08.804 | BUSHING, MB 1515 DU | 2 |
| 5 | NB.50.123 | PIN, COTTER 3.2X25 | 2 |
| 6 | NB.30.117 | WASHER, FLAT 28X2.5 | 4 |
| 7 | NB.10.125 | SCREW, HEXAGONAL M12X40 | 2 |
| 8 | NB.30.134 | WASHER, FLAT M12 | 2 |
| 9 | NB.30.130 | WASHER, LOCK M12 | 2 |
| 10 | NB.20.113 | NUT, HEXAGONAL M12 | 2 |

SC08E SPARE PARTS LIST

SC.08.910 KIT, SPARE PARTS FR 200 SC8E GX160 5.5 H.P.*


| Components | Description | Quantity |
|-------------------|--|-----------------|
| SC.08.119 | BELT, TOOTHED 640 SC8 FR200 GAS/ELEC | 1 |
| SC.08.510 | SHAFT, 12 MM FLAIL SC8 FR200 | 16 |
| SC.08.604 | BEARING, ENDPLATE FR200 SC08E 6006-2RS | 1 |
| HON.1441113 | PLUG, SPARK | 1 |
| HON.2893881 | ELEMENT, AIR FILTER GX160 | 1 |

SC.08.911 KIT, SPARE PARTS SC8E FR200 ELECTRIC/AIR*


| Components | Description | Quantity |
|-------------------|--|-----------------|
| SC.08.119 | BELT, TOOTHED 640 SC8 FR200 GAS/ELEC | 1 |
| SC.08.510 | SHAFT, 12 MM FLAIL SC8 FR200 | 16 |
| SC.08.604 | BEARING, ENDPLATE FR200 SC08E 6006-2RS | 1 |

SC8E 110 VOLT SINGLE PHASE SWITCH AND SHUNT WIRING DIAGRAM

AMP SETTING: 22

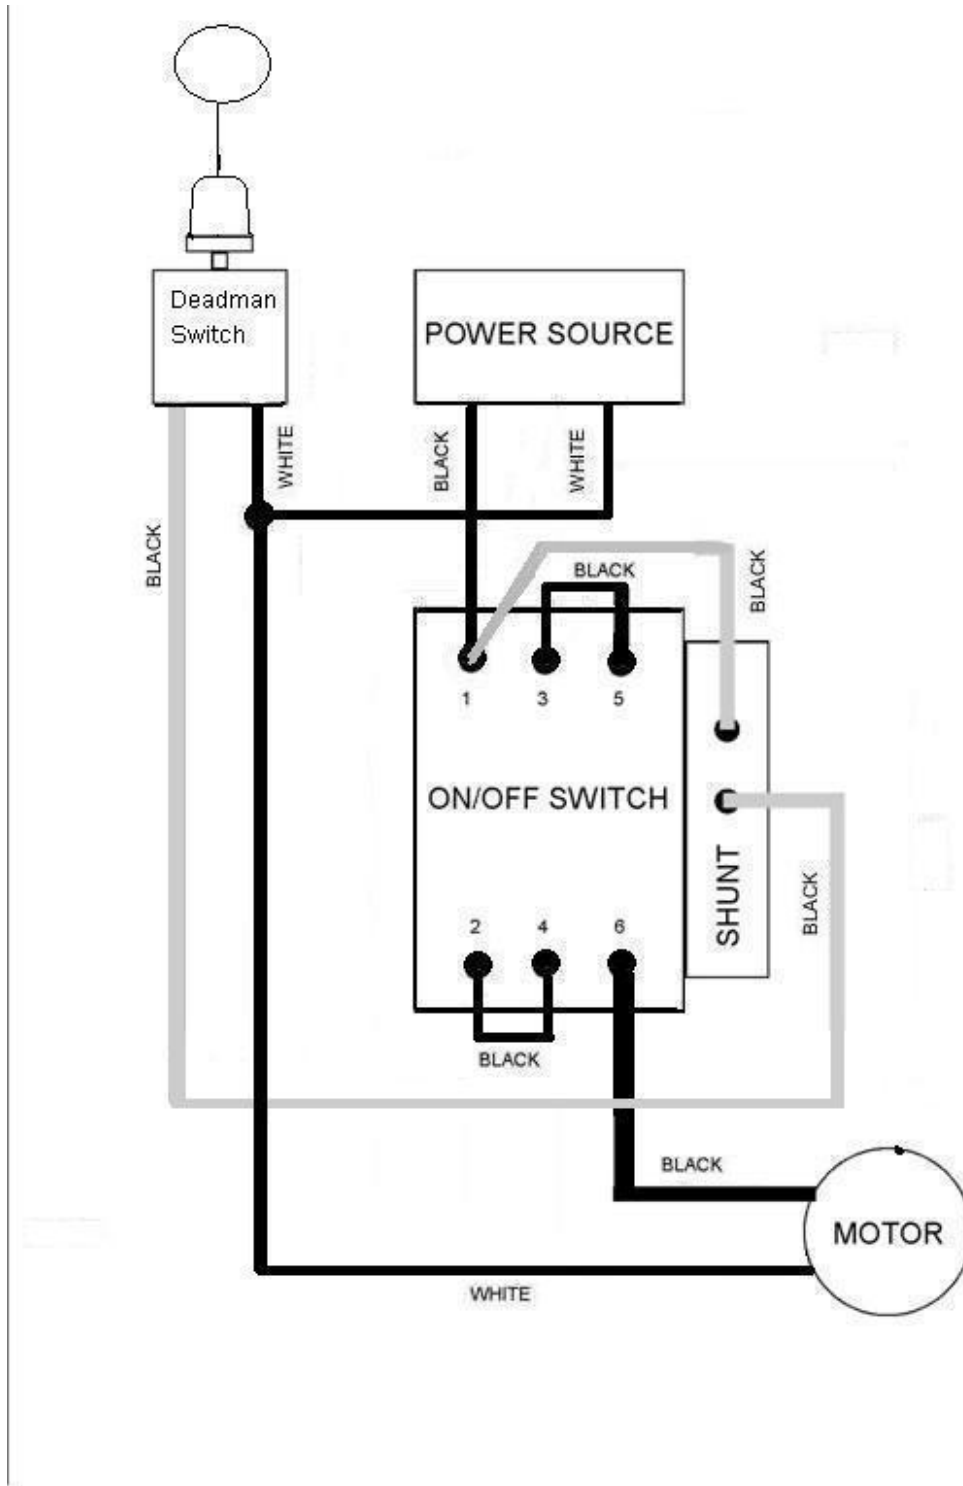

SC8E 230 VOLT SINGLE PHASE SWITCH AND SHUNT WIRING DIAGRAM AMP SETTING: 13

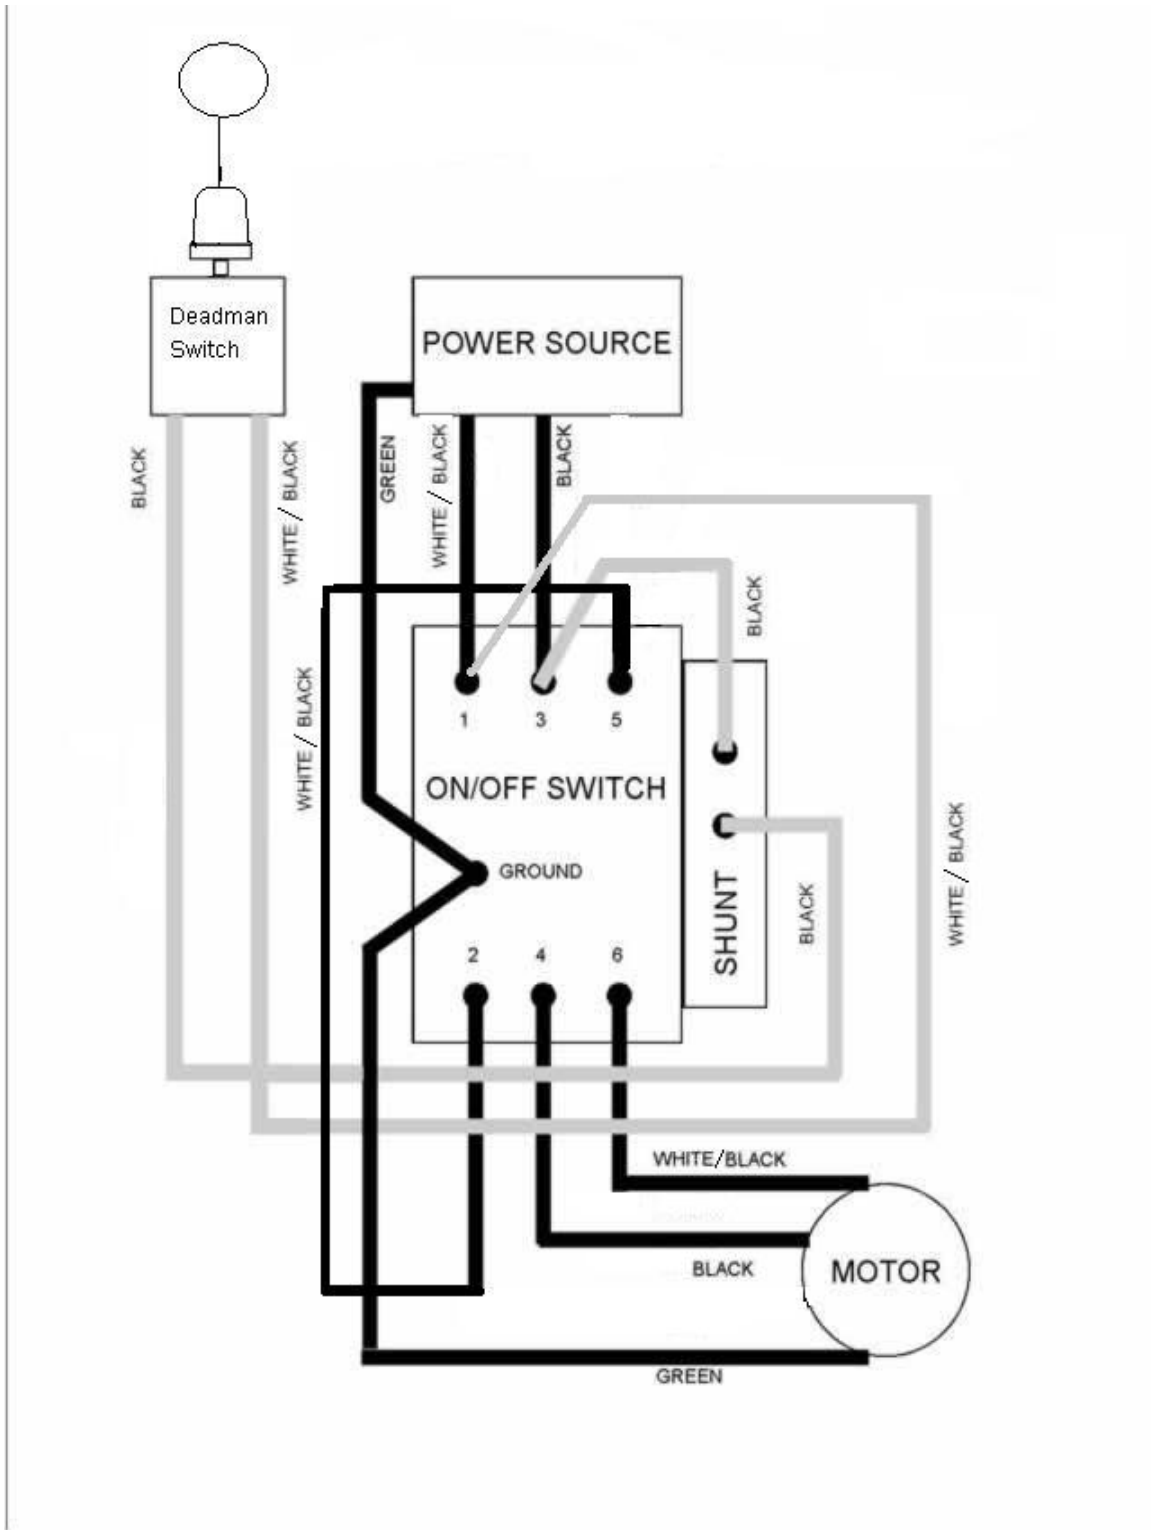


SC8E 230/460 VOLT THREE PHASE SWITCH AND SHUNT WIRING DIAGRAM

AMP SETTING

230V: 10

460V: 5

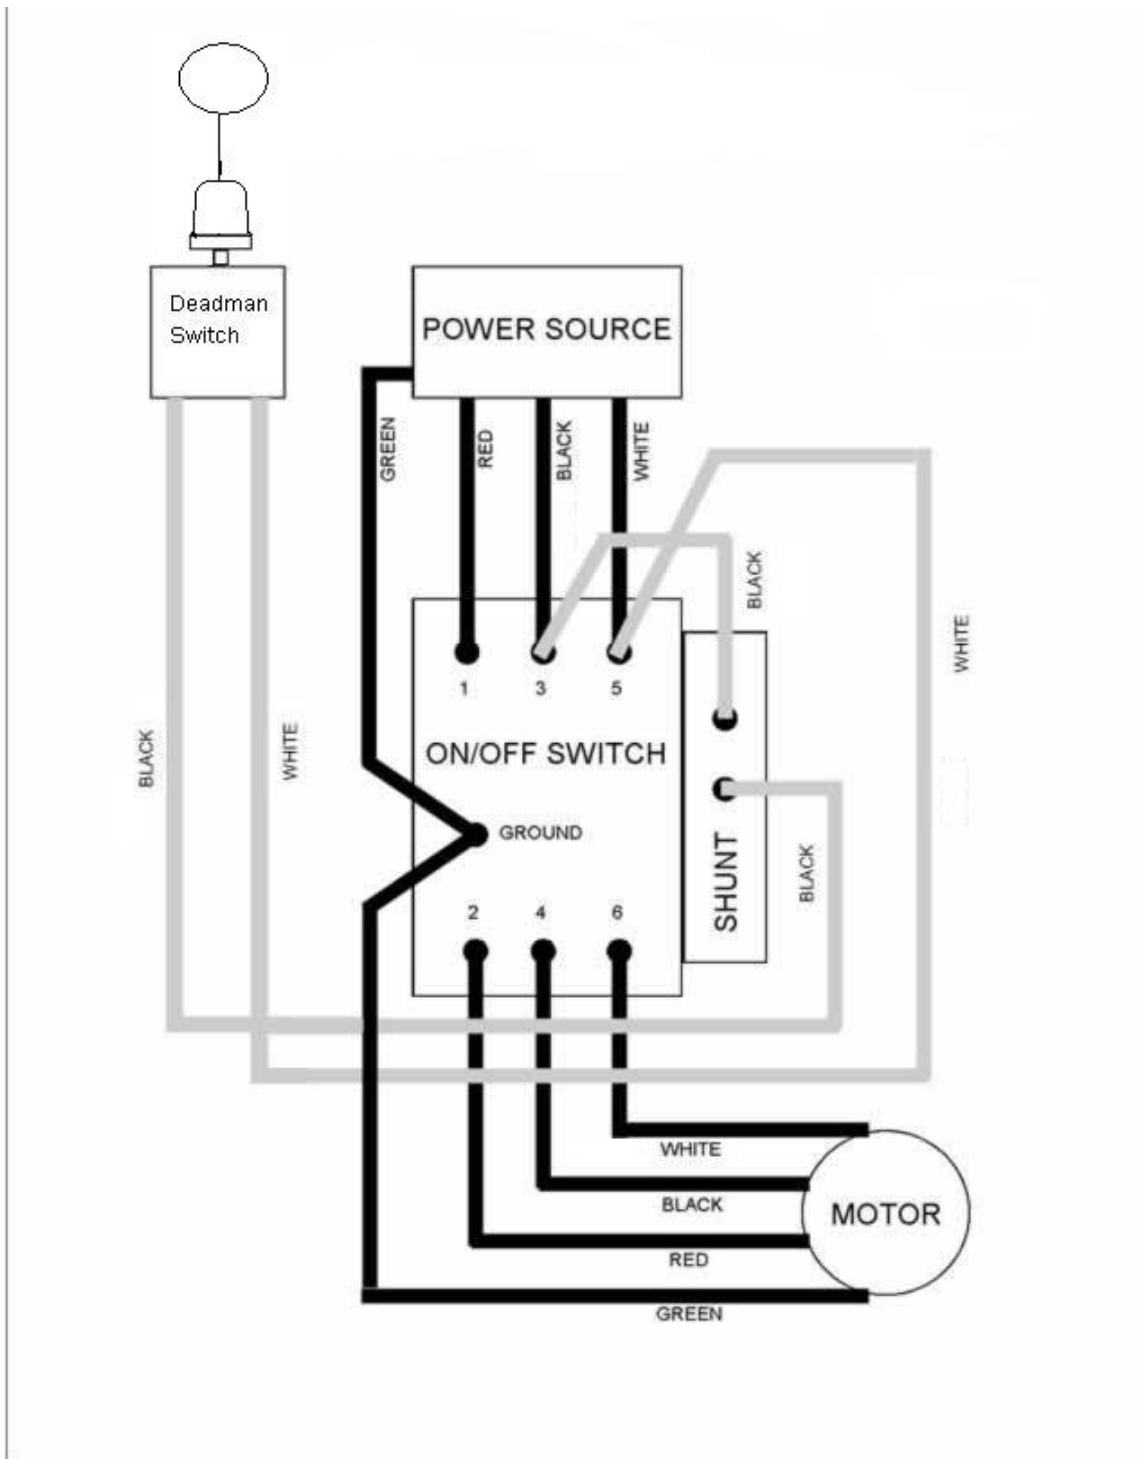



MANUFACTURER'S WARRANTY POLICY

Included in this warranty are the following pieces of equipment:

Scarifiers: SC12E, SC10E, SC8E

Our Commitment to our customer:

SRT equipment is warranted to be free of defects in workmanship and materials for a period of one (1) year from original date of purchase. In the event that you should have a claim SRT shall repair, replace or remedy the defective parts resulting from the faulty design, materials or workmanship. Note: This warranty is only valid for equipment either sold by SRT or by an authorized wholesaler or distributor.

Limitations:

- Warranty does not apply to cosmetic damage, damage due to lightning, electrical surges, fire, flood, or other acts of God, accident, misuse, abuse, repair or alteration by other than factory service (unless service center was approved in writing by SRT), negligence, or improper or neglected maintenance as recommended by SRT.
- Common wear parts, such as belts, bearings, seals, filters, dust skirts, wheels, etc., are exempt from warranty.
- SRT is not responsible for loss of income or down time as a result faulty design, materials or workmanship.
- Warranty coverage is valid once a warranty registration card is filled out and returned to SRT.
- A \$100 labor charge may be assessed on the items returned for warranty repair in which no fault is found. Freight charges and associated fees will then become the responsibility of the customer in such an instance.
- Damages which are caused during transportation are not covered under warranty. Such damage claims should be filed with the freight carrier.

Claims:

In the unlikely event that you should experience a defect please contact your SRT representative or a SRT service technician by calling 1.800.522.2606. Please have all pertinent information readily available such as, invoice with date of purchase, model and serial number, and an explanation of the issue. SRT will respond immediately with a corrective action.

Freight responsibility for approved warranty claims:

If the piece of equipment was purchased within 90 days of warranty claim, SRT will arrange for ground freight and will assume all ground freight charges to send the customer the parts required or to send the equipment to an authorized SRT repair center. This includes inbound and outbound ground freight and all fees (duties, fuel surcharges) associated with the shipment.

If the piece of equipment was purchased beyond 90 days and prior to one (1) year of warranty claim, SRT will cover 50% of all ground freight charges, including inbound and outbound freight and all fees (duties, fuel surcharges) associated with the shipment.



PRODUCT & WARRANTY REGISTRATION

WARRANTY IS VOID IF NOT RETURNED AND REGISTERED WITH SRT WITHIN 30 DAYS OF PURCHASE

COMPANY _____

NAME AND TITLE _____

STREET ADDRESS _____

CITY _____ STATE _____ ZIP _____ COUNTRY _____

PHONE _____ EMAIL _____

DATE OF PURCHASE _____ SERIAL NUMBER _____

INVOICE NUMBER OF PURCHASE _____

SC8E SC10E SC12E

PLEASE FILL OUT IN FULL AND SUBMIT TO:
SRT 2475 STOCK CREEK BLVD
ROCKFORD TN, 37853
FAX: 865.745.4110

QUESTIONS? CALL 800.522.2606